

Key Fob

The Key Fob transmitter has (up to) four buttons that allow the user to operate four receiver channels independently. The key fob will work in conjunction with Wall Switch Transmitter and can operate the Wireless Single Channel Receiver and Wireless Four Channel Receiver.



You can operate as many receivers as you wish, the receiver can learn up to 127 transmitters.



Use a Velcro square to mount the fob on the wall so that it can always be found.

Learning the Switch Code

1. Install the receiver box.
2. Remove the lid from the receiver box.
3. Press SW1 on the receiver, the green LED will flash twice.
4. Operate the key fob that is to work with this receiver. The Green LED will flash.
5. Press SW1 on the receiver, the green LED will flash twice.

Range Testing

Do not fit the receiver permanently in position until a range test has been successfully completed.

Transmission Range

For best results, hold the key fob vertically with the buttons facing you. A small improvement can be achieved by holding the fob above head height.

Battery Replacement

For replacement battery, use type CR1220 3V Lithium cell or equivalent. Make sure the +ve of the battery is to the top when replacing.

Key Fob Specifications

Operating Voltage:	3 volt, CR1220 lithium cell
Battery Life:	approximately 1 year depending on use.
Temperature Range:	-10 to +40°C
Standards:	MPT1340
Frequency:	433.9 MHz
Transmission Range:	up to 200m line of sight



4 Channel Key Fob Transmitter



2 Channel Key Fob Transmitter